

Please use the instructions below to program your cards, fobs or wristbands to your lock. We've attached a picture of the lock showing the button placements. The reset is circled in yellow and the programming buttons in green. If your lock has been removed from the unit, you'll see lights flash from the lock as you program the keys.

You can find video instructions for the standard RFID lock at:

<https://youtu.be/xZWDIZk3qwA>

And video instructions for the Bluetooth enabled lock, which is slightly different at:

<https://youtu.be/Jzy5kYjA0SY>

How to program RFID lock:

Step 1: Press the reset button on the front of the lock until it beeps 3 times

Step 2: Press and hold button 3 on the front of the lock. You will hear one beep when you press the bottom; continue to hold the button until you hear one long beep.

Step 3: Press button 1 on the front of the lock (you will hear a beep) and then swipe a card three times. First swipe you'll hear a beep and see the light flash green. Second swipe you'll hear one beep and the light will quickly flash red and white and then flashing green. Third swipe will beep once and then show a solid green light before a flashing green light.

*This will now be the Manager/Programming Card

Step 4: Immediately swipe all other cards one at a time. You want to quickly swipe each user card so that you hear only one beep. If you hear two beeps the card/fob wasn't programmed and you'll need to start over.

*These are the User Cards and will be used to unlock the shelf.

Wait 8 seconds after swiping the last user card and then test the key card on the lock. If the lock doesn't respond to the key card it means the card is not programmed and you should not close the unit. You'll need to follow these steps again to program the cards.

(The Manager/Programming Card can't be used to unlock the shelf. It will reset the lock if swiped after programming the User Cards. Mark it as a programming card and place it in a safe location.)

Make sure to test the cards before closing the unit. If the lock does not respond to the cards try programming them again.

Thanks

Customer Care
Tactical Traps

