



The Tactical Sofa Table

How It Works/ Product Information

Assembly

Safety Rules

Troubleshooting

Congratulations on your decision to purchase a Tactical Trap. You've made a wise decision and we're grateful you've given us the opportunity to serve you as a customer. If you have any questions about your product don't hesitate to contact our support team via email at support@tacticaltraps.com

Legal Disclaimer: Misuse of products sold by Tactical Traps can involve serious risks including injury, disability and death.

Step 1: What's included with your Tactical Sofa Table

- **2 Key cards.** The key cards will be used to open the unit.
- **Buzzer setting card:** This can be used to silence your lock.
- **Battery backup pack:** This can be used to open the table if the batteries die.
- **Foam insert:** This is used to hold your firearm.
- **Magnet:** The magnet can be placed in the foam cut to help hold your gun in place.
- **LED light**
- **Assembly parts:** Table top with slide out tray, 2 table legs, 2 false drawer fronts and bottom shelf.
- **Assembly hardware:** 2 handles, 5 dowel pins and 2 packs of screws

If your package is missing any of these items, please email us at support@tacticaltraps.com

Step 2: How the Table Works

Your unit is equipped with a Bluetooth enabled RFID locking system and emergency battery backup. Included with your unit are 2 RFID keycards and 1 sound card. You can find those taped to the bottom of your unit in a yellow envelope. (Save the 4-digit PIN on the envelope, you'll need this to connect to Bluetooth.

To open the table, place any one of the keycards included over the orange sticker dot on the top of your table. The lock will automatically disengage and the tray will drop down and slide out.

To close the table, wait 3 seconds for the latch to automatically reset and then just gently slide the drawer in and push up until it latches closed.

NOTE: Pay no attention to how the keycards are labeled (manager/user), they all work the same. They are labeled that way for programming, which we did for you.

Also, the keycards included can be hidden (or attached by using double sided tape) under any décor you chose to place on top of your table or in a wallet, so you don't have to worry about misplacing them. DON NOT CUT the cards in any way; it will deactivate them.

Buzzer Setting/Sound Card:

The lock is equipped with a beeping noise to let you know if the unit is not secure. One swipe/scan of the sound card will disable the beep, another swipe will restore the beep.

NOTE: please make sure to leave the sound on until you're familiar with the locks trigger point (marked with the orange sticker). You can remove the orange sticker dot after you are familiar with that trigger point.

Step 3: Assembling your Tactical Sofa Table

NOTE: Please read instructions thoroughly before beginning the step-by-step assembly instructions...and then grab a buddy because this is not a one-man job.

Assembly Step 1: Unpack. Remove all parts and hardware from box.

Assembly Step 2: Parts included: Table top with slide out tray, 2 table legs and 2 false drawer fronts. Hardware included: handles, dowel pins, two screw packs.




Assembly Step 3: Insert dowel pins into table legs, as pictured. You will only use 4 of the 5 included.

Assembly Step 4: Attach door handles to the front of each false drawer fronts with the gold screws.



Assembly Step 5: Removing black slide out tray from the table top. The key cards are attached under the table top in a small envelope. Remove one user card and slide it over the orange dot on top of the table to open. Remove the strap (5A) that is holding the slide out tray in place. Pull the tray out, then locate the quick release on each rail under the tray as shown in 5B and push to the left as shown in 5C, this must be done on both rails simultaneously so you can then pull the tray off the slide. It will take two people to stabilize the table and lift out the tray. Once the tray is out you can set this aside.

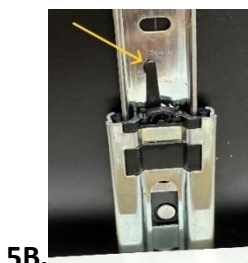

Assembly Step 6: Remove damper from hardware by inserting a quarter inch wide flat head screwdriver under the c-clip, using the screwdriver as a lever, pry slightly up on the band and push away from the hardware to release the damper from the hardware.



Assembly Step 07: To attach the false drawer fronts, place a screw into one of the pre-drilled holes from inside the front of the table. There are two indents in the back of the false drawer front, place the drawer front so that the screw tip is in alignment with one of the indents, apply firm pressure to the false drawer and screw in place tightly. Do the same for the hole on the opposite side and then repeat for the second false drawer front. You can use a drill for this step, but do not over tighten. **NOTE: IT IS VERY IMPORTANT TO MAKE SURE THE SCREWS ARE INSERTED INTO THE INDENTS ON THE BACK OF THE FALSE DRAWER SO THAT THEY ARE STRAIGHT AND EVEN.**



Assembly Step 08: Flip the table upside down. Keep the door open. Use provided hardware with the Allen key to attach the table legs. Notice orientation of table leg, the X is towards the outside. Insert both bolts into the pre-drilled holes through the inside of the table top. Line up the bolts with the pre-drilled holes in the legs and then screw tightly with the Allen key. Start second set of legs, installing in the same manner, except you will not tighten this side. The second side will be tightened after the bottom shelf is installed.



Assembly Step 09: Installation of bottom shelf/leg support. Bring shelf up to the leg that is fully tightened. Align the holes in the shelf with the dowel pins in the leg and seat it firmly up against the leg. Use the loose leg to help align the other side of the shelf and press firmly in place. Then tighten the bolts with the Allen key attaching the loose leg firmly to the table top.

Assembly Step 10: Finish installation of the bottom shelf. Notice the orientation of the tray, the four holes are at the bottom. Use the remaining four screws with Allen key and tighten them. This will complete the installation of the bottom shelf.



Assembly Step 11: Flip table over so that it's in the upright position. Re-attach the dampers to the damper hardware inside the cabinet. You will need to push the damper in hard as it will take a lot of pressure. Make sure the c-clip you lifted up to release the damper is pushed back down so that it will hold the damper in place. Your table should look like this.

Important: Before moving on to Assembly Step 12 and completing assembly, please refer to “**Step 5: Batteries**” below and install 4 new high alkaline AAA batteries into the lock mechanism.

Assembly Step 12: Re-attach the tray by extending the slide out rails from the drop-down door and lining up the rails on the tray to the rails you just extended from the drop-down. Now slide the tray into place. Make sure that the tray is attached to the rails securely and cannot be pulled back off of the rails. You should be able to push the tray into the table and shut the concealment door.




Step 4: How the Bluetooth Lock Works

Your Tactical Sofa Table has been upgraded to our new Bluetooth lock. Included with your table are 2 RFID keycards. You can find those taped under the table in a small yellow envelope. (Save the 4-digit pin on the envelope, you'll need this to connect to Bluetooth. This 4-digit PIN is also printed on the face of your lock, which is harder to see.)

1. Update your phone's software if possible
2. Restart your phone
3. Turn on your Bluetooth
4. Go to the app store if you have an iPhone and search Tactical Traps. If you have an Android go to Google Play and search Tactical Traps. Download and install the app
5. After you download the app, open it up and click the Bluetooth connect button. Your phone will scan for the lock. When it's found enter your 4-digit pin number. You can find this number written on top of the envelope your key cards came in. It's also located on the lock face inside your table. Please double check that Location Services is turned on in your settings, which is required of any Bluetooth device to work, and that all permissions are turned on in the app settings.
6. Click the unlock button after the app is installed and Bluetooth is connected to open

your table.

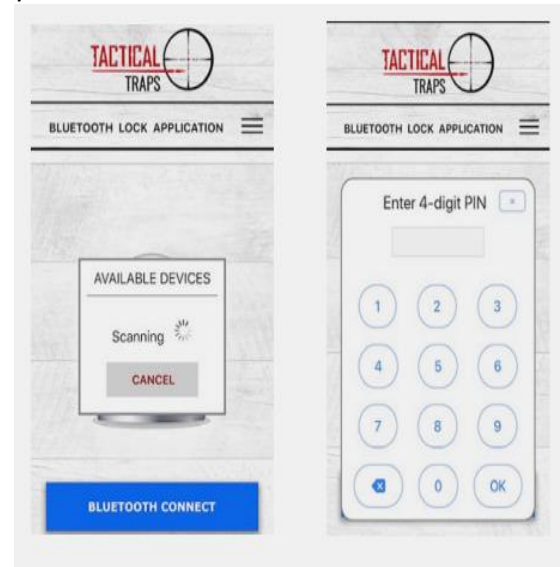

Step 5: Batteries

The RFID lock runs on 4 AAA batteries that should be changed every 5 to 6 months, depending on use. To change the batteries you will need to remove the black slide out tray. (Refer back to **Assembly Step 5: Removing black slide out tray from the table top.**) Once the tray is removed and you have access to the locking mechanism, simply remove the thumb screw (black knob) from the lock and then open the battery cover. Then remove the old batteries and **replace with good quality new high alkaline batteries.** When the lock battery gets low, you will hear a series of beeps when you place the key over the trigger point on top of the table. When you hear that series of beeps it's time to change the batteries. If you've used the sound setting card to disable the beep you will not hear this warning beep.

***IMPORTANT:** Make sure the internal backup wire is plugged firmly into the locking mechanism before closing or the backup pack will not work. **Do not store the battery backup pack inside the unit.**

Step 6: Battery Backup Pack

If for some reason the batteries in your lock die before you change them - no problem! You can always get to your guns by using the battery backup pack that came with your purchase.

Here's what you do:

1. Place 4 AAA batteries inside your battery backup pack.
2. Locate the small auxiliary hole on the upper backside center of the table.

3. Plug the backup pack into the hole as tightly as it will fit.
4. Scan one RFID card over the locking mechanism (where the orange dot sticker was) just like you normally would, and your table will open.
5. When your table is open, change all 4 AAA batteries in the lock.
6. **Remove the batteries from the backup pack and store outside the table.**

Step 7: LED light

The included LED light is motion detected, meaning there isn't an on/off switch. When the table is closed the light will shut off. When it opens it will turn on by itself.

To mount your light, you will peel and stick either the long magnet (strip light) or the small round sticker (round light) on the top/inside of the table, making sure it's placed away from the lock. Both lights are upgraded versions; we send the style of light based on what our vendor has sent us.

Step 8: Cutting the Foam to Fit Your Accessories

Note: For a video walkthrough go to: tacticaltraps.com/install

Lay the foam insert on the floor. Lay your gear on top. Push down snugly and trace them using a marker. Make sure if you're tracing your firearms that they are unloaded, and the chamber is empty!

Next, cut out the foam carefully using a sharp and brand-new razor/utility knife. It's recommended that you cut through at least $\frac{3}{4}$ of the foam for a handgun. The more time you take to do this correctly, the better your gear will fit. Don't be sloppy with this because the foam is designed to hold your gear in place when the unit lowers. If the cuts are not precise you run the risk of your gear falling out when opening the table.



*****VERY IMPORTANT***** After you get everything cut out, remove the adhesive backing and carefully place it in the table tray making sure it's lined up correctly. Once you verify its cut correctly, insert the included magnet into the cavity and secure it with 1 screw. This magnet should hold your gun tight in the compartment. **Foam by itself is not enough to prevent the gun from falling out.**

Step 9: Safety Rules to Consider

1. Don't store your firearm with a live round in the chamber.
2. Remember a tactical trap is not a safe; and although it's sturdy and well-built, it can be knocked off the wall or broken with enough force. In the unlikely event of that happening your gun could send a round through your house after being dropped! Yes, many new firearms are equipped with a drop safety to prevent this, but this is still something you should consider especially if you live in a home with

children. You can take back a lot of things in life but a bullet is not one of them. Please remember that and be responsible when you store your gear.

3. If you have children living in your home it would be a good idea to move your firearms into a locked safe when you are not home or by your Tactical Trap. Most children will not understand how to work the product, but it's better to be safe than sorry. Plus, the whole purpose of a Tactical Trap is for quick access and if you're not home ... it makes no sense to leave your firearm inside of it.

4. Our products are designed to blend in as ordinary pieces of furniture and are strong enough to hold knick-knacks, candles, small vases, etc.... the normal items you might see on an ordinary table. They are not designed to hold items over 50 lbs. on top! Use common sense with decorating your table. If you think an item you want to place on your table might be too heavy... then it probably is. Also, don't store more than 15lbs of gear inside the slide out tray. That's more than enough weight to hold a rifle, handgun, spare mags and a flashlight.

5. Even though it takes considerable force to pry the table open...it is not intended to serve as a substitute for a government regulated gun safe. A lock, any lock in the world including a bank vault can fail. Is it likely? No, but neither is lightning striking you, but it can happen. So, if you have young children living or visiting your home... don't allow them to play with the Tactical Sofa Table. If you have older children living or visiting the house that you don't want messing around with your guns...take them out of the table when you're not home and lock them in a safe. Use common sense when storing your firearms and you'll be just fine.

Step 10: Troubleshooting

Q: My table won't close.

A: No problem, we have a quick fix! Please go to our video page:

<http://www.tacticaltraps.com/install> and watch the new video our manager just uploaded titled Tactical Table Won't Shut. The black box inside your table just needs a little bit of an extra 'push' backwards with your thumb for it to line up with the locking mechanism and latch into place. Please let us know if this helps.

Q: My table won't open.

A: You might need to apply slight upward pressure to the bottom to disengage the lock. This is perfectly normal.

Q: Where is the battery backup port located?

A: When standing in front of the table, it is on the RIGHT side of the black box mounted under the table. You can run your hand alongside the black box to feel the auxiliary port. It is meant to be discreet so it isn't easy to spot. If you forget to change your lock batteries and your table won't open, insert

4 AAA batteries into the pack and plug it into this port. Then scan the RFID card or use the Bluetooth option to open the table. Once open, immediately change the 4 AAA batteries inside your lock (use alkaline batteries.)

For other questions not answered here, see tacticaltraps.com/faqs or create a support ticket by emailing us at: support@tacticaltraps.com

Contact Us:

support@tacticaltraps.com

(800)651-9171